

Directions for Use of Foam Gun

Directions for use of foam gun:

1. Take a can of gun foam and shake vigorously.
2. Screw can on to adaptor of gun (not too tight).
3. Release the flow adjustment screw lightly and dispense foam immediately to fill the entire gun with foam.
4. The foam gun is now ready for use.
5. Foam output can be controlled with flow adjustment screw.

After use of the foam gun:

1. Leave gun filled with foam after use. Always keep a filled can of gun foam on the gun.
2. Tighten the flow adjustment screw completely. Do not empty the gun. Gun must always be filled with foam, otherwise foam is cured due to the humidity in the air.
3. Put can away in a vertical position (gun upwards).

Use foam gun again:

1. Shake the can vigorously (keep hold of the gun).
2. Remove cured foam at the tip of the nozzle carefully with a small, sharp knife.
3. Release the flow adjustment screw lightly and dispense foam immediately until the flow of foam is correct.
4. The gun is now ready for use.
5. Foam output can be controlled with trigger of the gun.

Replacing the can of gun foam:

1. Check if the can is empty by dispensing foam in a dustbin until no more foam is released.
2. Take a new can of gun foam. Shake vigorously.
3. Unscrew the empty can (keep valve opening away from you), remove released foam from adapter and replace the empty can immediately by a new one.
4. Dispense foam immediately to fill the extension tube.

Cleaning of the foam gun at time of interruption:

1. Unscrew the can of gun foam (keep valve opening away from you).
2. Take a can of gun cleaner and screw the can on the gun.
3. Pull the trigger again to refill the gun with cleaner.
4. Cleaner must remain in the gun for about 10 minutes.

5. Pull the trigger again to refill the gun with cleaner.
6. Unscrew the can of gun cleaner.
7. Screw the can of gun foam on to the gun.
8. Pull the trigger of the gun again until foam is released and cleaner completely removed.
9. The gun is now ready for use.