


# Dranjer FS2 Sump Drain

## DRAIN ASSEMBLY

- Place all pieces and click together as shown:

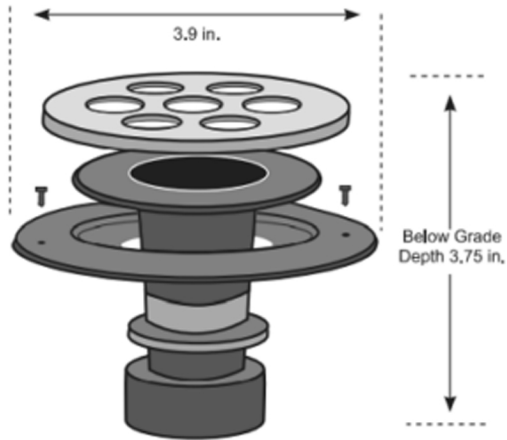

## DRAIN INSTALLATION

- Drill a 2 <sup>3</sup>/<sub>4</sub>" hole in your sump pump basin's lid.
- Drop the FS2 into that hole from the **top of the basin lid.**
- Drill a <sup>3</sup>/<sub>32</sub>" pilot hole through the basin lid using the pilot hole in the FS2 Retaining Ring as a guide.
- **Remove** the FS2 and screw the first DT screw just through the lid.
- Hold the FS2 **under the sump pump lid.** Fit the pilot hole in the retaining ring to the protruding screw point.
- Tighten.
- Align the FS2 in the 2 <sup>3</sup>/<sub>4</sub>" hole.
- Drill a second <sup>3</sup>/<sub>32</sub>" pilot hole through both the basin lid and the FS2 and fasten with a screw.